

Steam-O-Power



Instruction Manual



Mode d'emploi



Istruzioni per l'uso



Gebruiksaanwijzing



Manual de instrucciones



Bedienungsanleitung



Manual de instruções



РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ

STEAM-O-POWER

Thank you for purchasing Steam-o-Power. Before using your Steam-o-Power, please read the following safety instructions carefully, as they are written to help you get the best performance out of your Steam-o-Power and to use it correctly. After reading the instructions, keep them in a safe place for future reference.

Steam-o-Power is the easiest, quickest and most efficient way to iron clothes, thanks to its powerful steam function. It can be used on even the most delicate fabrics and it's also great at eliminating unpleasant odours from clothes.

IMPORTANT

Steam-o-Power is an electrical appliance and it is therefore necessary to take certain precautions:

- Keep out of the reach of children.
- Never use Steam-o-Power without filling it with water.
- Ensure your hands are dry before using Steam-o-Power.
- Attach the accessories only when they are completely cool.
- Unplug from the mains after every use.
- Never try to remove the water-reservoir cap while the appliance is being used.
- Never attach or remove any of the accessories while they are hot or while the appliance is plugged into the mains.
- Do not try to use accessories that have not come with Steam-o-Power.
- Never point Steam-o-Power at people, animals or other electrical appliances, as its steam can cause burns.
- Never try to iron clothing while someone is wearing it.
- To prevent bodily injury or damage to surfaces, avoid leaving Steam-o-Power on the floor or other surfaces while it is plugged into the mains.
- Do not immerse the power cable or the appliance in water or any other liquid.
- To avoid overloading, do not plug any other appliance into the same circuit as Steam-o-Power.
- Do not use the appliance if steam is emitted from any part other than the soleplate.
- Do not allow the power cable to touch hot surfaces.
- Use only the cable and adaptor provided.
- Do not use the appliance outdoors.
- Do not disassemble, repair or modify Steam-o-Power.
- Never place heavy objects on top of Steam-o-Power.
- This product should not be used by anyone with physical, sensory or mental disabilities, or by people without adequate experience and knowledge, unless they are supervised by somebody responsible for their safety.
- Children should not be allowed to play with this appliance.
- Ensure that liquid and steam are not expelled from the unit in the direction of other electrical appliances.
- Use only in accordance with the instructions provided.

CONTENTS

- 1 Steam-o-Power iron
- 1 measuring cup
- 1 cleaning brush
- 1 ironing accessory
- 1 pleating accessory
- 1 instruction manual

**ASSEMBLING THE DEVICE**

Parts and functions:

1. water reservoir
2. water-reservoir cap
3. power light indicator
4. steam-release button
5. handle
6. power-cable protector
7. measuring cup
8. cleaning brush
9. steam-iron accessory
10. release button for steam-iron accessory
11. pleating accessory
12. release button for pleating accessory

ATTACHING THE ACCESSORIES:

1. Before attaching any accessory, ensure the appliance is switched off and not emitting any steam. Also make sure the accessories are cool before removing them. The use of heat-resistant gloves to handle the accessories is recommended, as they may be hot.
2. Choose the accessory for what you want to do. The ironing accessory works very well with linen, wool, cotton, polyester and silk. The pleating accessory is for putting creases in trousers and other pleated garments.
3. To attach the ironing accessory, push the button at the side of the unit to remove the pre-attached pleating accessory. Align the ironing accessory with the base of the unit and push until fully attached. When attaching the pleating accessory, push the two tabs into the holes in the base of the iron until fully attached.



4. To detach the ironing accessory, press the catch and remove the accessory. When detaching the pleating accessory, push the white button on the side of the accessory and remove it.



FILLING WITH WATER

To fill Steam-o-Power with water, ensure the appliance is switched off and unplugged from the mains. Fill the appliance only when it is completely cool. Never use this product without filling it with water!



- 1.Fill the measuring cup with water to the maximum level mark (approximately 100 mL).
- 2.Lift the water-reservoir cap and pour in the water from the measuring cup. Do not overfill the water reservoir. Replace the water-reservoir cap and ensure it is closed tightly.
- 3.Before refilling the water reservoir, press the steam-release button to ensure the appliance is completely empty.
- 4.Before using the appliance, ensure it is completely cool and empty and do the same before putting it away (see "Instructions For Use").

INSTRUCTIONS FOR USE

- 1.Attach the appropriate accessory for the garment you wish to iron.
- 2.Fill the appliance with water.
- 3.Plug in Steam-o-Power and check that the power light indicator is illuminated.
- 4.Wait for approximately one minute while the appliance heats up. Press the steam-release button. This button should not be pressed continuously, as it will reduce steam pressure. Wait for the light to turn off before beginning to iron. The steam-release button can be pressed when the light is off.
- 5.Before applying steam to a garment, first test the appliance on an old piece of the same material.
- 6.Move Steam-o-Power over the whole garment while pressing the steam-release button to release steam evenly. The iron may be moved both horizontally and vertically. For best results just touch the garment lightly with the iron.
- 7.If the appliance runs out of water before you have finished ironing, allow it to cool completely before refilling it (see "Filling With Water"). Never use this appliance without filling it with water!
- 8.While using the appliance, you will see that the power light indicator switches itself on and off. This is perfectly normal and occurs when the appliance is adjusting the optimum ironing temperature.
- 9.Unplug Steam-o-Power when you finish using it. **WARNING: Always pull out the plug from the mains. Never pull on the power cable to switch off the appliance. Make sure that the power light indicator is off.**

For best ironing results:

- Some garments should be ironed inside out.
- Trousers can be ironed more easily when held from the bottom.
- When ironing, touch the fabric lightly with the iron and move it in different directions to get rid of wrinkles. It is important for the iron to touch the fabric of the garment.
- The iron will not remove stains from a garment.
- Steam-o-Power can be used with almost any kind of fabric, including silk, cotton, polyester and wool. Please read the garment's care label to check that it can be steam ironed. Certain materials such as leather, suede and velvet cannot be steam ironed.
- To ensure the garment can be steam ironed, test the iron on a small part of the interior of the garment. If no damage occurs, the entire garment can be ironed.

CLEANING AND MAINTENANCE

- 1.When you have finished using Steam-o-Power, make sure that it is completely

unplugged from the mains before starting to clean it.

- 2.Allow the water in the appliance to cool for 15 minutes. Then carefully remove the water-reservoir cap.
- 3.Turn the appliance upside down to empty out all the water.
- 4.Clean the appliance and accessories only when they have completely cooled. The cleaning brush is ideal for removing any fluff from the accessories.
- 5.Store the appliance in a dry, safe place.
- 6.Use only clean water. Using filtered, mineral or distilled water will prolong the appliance's life. Tap water can also be used.
- 7.Never put detergent, chemicals, salt, perfume, dye or any other liquid except water into the water reservoir. Many of these substances are highly flammable and may cause bodily harm, while certain additives can corrode and clog the appliance's components. Nor should you add essences to perfume the water.

Removing mineral deposits:

A common problem with steam irons is the accumulation of mineral deposits in the tubes, normally when tap water is used to fill the iron. To reduce or remove these mineral deposits, use filtered, mineral or distilled water. The following steps, if taken at least once a month, can also reduce the level of mineral deposits if mineral or distilled water cannot be used:

- Ensure the appliance is unplugged from the mains and cool.
- Make a solution that is 50% vinegar and 50% water. 60 g is enough.
- Remove the water-reservoir cap and gradually pour in the solution.
- Allow it to work for 40 minutes, adding more solution when the water reservoir becomes empty.
- Pour the solution remaining in the water reservoir into the sink or other container.
- Fill the water reservoir with water and then empty it again. Repeat until the vinegar smell has gone.

TECHNICAL SPECIFICATIONS

Frequency: 50 Hz

Power: 650 W

Voltage: 220 V AC

Steam-o-Power conforms with the following CE Marking Directives:

- Electromagnetic Compatibility Directive (EMC) 2004/108/EC.
- Low Voltage Directive (LVD) 2006/95/EC.

GUARANTEE

This appliance is covered by a warranty against manufacturing defects, the duration of which is stipulated by the legislation in force in each country.

WARNING

PROPER DISPOSAL OF MATERIALS

The logo with a crossed-out rubbish bin indicates that you should be informed on how to dispose of this appliance in accordance with local regulations for the disposal of these types of products.

Do not dispose of this product in the same way that you would dispose of general household waste. Dispose in accordance with local regulations. Electrical and electronic products contain dangerous substances that have harmful effects on the environment and human health and should be recycled properly.

Industex, s.l
Av. P. Catalanes 34, 8ª planta
08950 Espigas de LLobregat,
Barcelona, Spain
Made in China

